


Yagi Antennas



Banner Part No: 77479
Model No: BWA-9Y6-A
Description: 890-960 MHz, 6.5 dBd, N Female

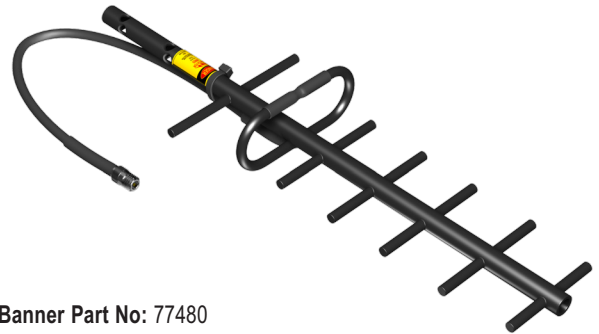


Banner Part No: 77480
Model No: BWA-9Y10-A
Description: 890-960 MHz, 10 dBd, N Female

Omni Antennas



Banner Part No: 77481
Model No: BWA-9O6-A
Description: 902-928 MHz, 6 dBd, N Female, Fiberglass

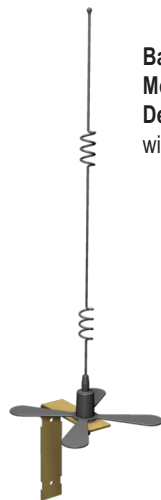

Banner Part No: 77819
Model No: BWA-9O5-B
Description: 902-928 MHz, 5 dBd/7.2 dBi, N Female, with Ground Plane



Banner Part No: 76908
Model No: BWA-9O2-C
Description: 902-928 MHz, 2 dBi, RP-SMA Male

SureCross™ Antennas and Accessories Specifier's Guide




Banner Part No: 81080
Model No: BWA-208-A
Description: 2.4 GHz, 8.5 dBi, N Female, 24" Outdoor



Banner Part No: 81081
Model No: BWA-206-A
Description: 2.4 GHz, 6 dBi, N Female, 16" Outdoor

Part No	Model No	Description
77816	BWA-202-C	2.4 GHz, 2 dBi, RP-SMA Male, Rubber swivel
77817	BWA-205-C	2.4 GHz, 5 dBi, RP-SMA Male, Rubber swivel
77818	BWA-207-C	2.4 GHz, 7 dBi, RP-SMA Male, Rubber swivel

Surge Suppressors

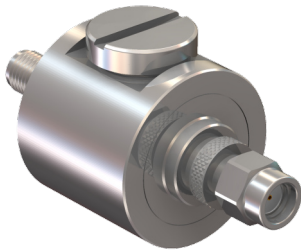

Banner Part No: 79296
Model No: BWC-LMRSFRPB
Description: Surge Suppressor, bulkhead, RP-SMA Type



Banner Part No: 78548
Model No: BWC-LFNBMN
Description: Surge Suppressor, bulkhead, N-Type



Banner Part No: 77485
Model No: BWC-LFNMN
Description: Surge Suppressor, N-Type

SureCross™ Antennas and Accessories Specifier's Guide

Cables



Part No	Model No	Description
77486	BWC-1MRSMN05	LMR200 RP-SMA to N Male, 0.5M
77820	BWC-1MRSMN2	LMR200 RP-SMA to N Male, 2M

Part No	Model No	Description
77488	BWC-1MRSSFRSB4	RG58, RP-SMA to RP-SMAF Bulkhead, 4M
78337	BWC-1MRSFRSB1	RG58, RP-SMA to RP-SMAF Bulkhead, 1M
78338	BWC-1MRSFRSB2	RG58, RP-SMA to RP-SMAF Bulkhead, 2M
78544	BWC-1MRSFRSB0.2	RG58, RP-SMA to RP-SMAF Bulkhead, 0.2M



Part No	Model No	Description
77489	BWC-4MNFN3	LMR400 N Male to N Female, 3M
77490	BWC-4MNFN6	LMR400 N Male to N Female, 6M
77821	BWC-4MNFN15	LMR400 N Male to N Female, 15M
77822	BWC-4MNFN30	LMR400 N Male to N Female, 30M

Miscellaneous

Part No.	Model No.	Description
78384	BWA-QD12.5	Prewired 12-pin Euro connector, 1/2-14 NBSM
78382	BWA-QD5.5	Prewired 5-pin Euro connector, 1/2-14 NBSM
78383	BWA-QD8.5	Prewired, 8-pin Euro connector, 1/2-14 NBSM
79985	BWA-RIBBON-001	Ribbon cable, 20-pin DBL socket
77669	BWA-E2M	Ethernet cable, RSCD RJ45 440, 2M
78469	BWA-E8M	Ethernet cable, RSCD RJ45 440, 8M
78467	BWA-EX2M	Ethernet cable, crossover, RSCD RJ45CR 440, 2M
77161	SMBDX80DIN	Bracket assembly, DIN rail, flat mount

SureCross™ Antennas and Accessories Specifiers Guide

Hardware Packs

Part No	Model		Item
76907	BWA-HW-001	Mounting Hardware Kit	Screw, M5-0.8 x 25mm, SS (4) Screw, M5-0.8 x 16mm, SS (4) Hex nut, M5-0.8mm, SS (4) Bolt, #8-32 x 3/4", SS (4)
76906	BWA-HW-002	DX80 Access Hardware Kit	Plastic threaded plugs, PG-7 (4) Nylon gland fittings, PG-7 (4) Hex nuts, PG-7 (4) Plug, 1/2" NPT Nylon gland fitting, 1/2" NPT
76910	BWA-HW-003	PTFE Tape	
16328	BWA-HW-004	Replacement Seals	O-ring, rotary access cover, PG21 (2) O-ring, body gasket (2) Acces cover, rotary, clear plastic (2)
80522	BWA-HW-005	M-GAGE Installation Pack	PTFE Tape Foam insert, 1 1/4" (2)
81325	BWA-HW-006	Adapter Cable, USB to RS485	Adapter cable SureCross literature and software CD
81233	BWA-HW-007	Housing Kit, DX80	DX80 top and bottom (10)
80850	BWA-HW-008	Housing Kit, DX81	DX81 top and bottom (10)

The manufacturer does not take responsibility for the violation of any warning listed in this document.



CAUTION . . .
Make no modifications to this product.

Any modifications to this product not expressly approved by Banner Engineering could void the user's authority to operate the product. Contact the Factory for more information.

Always use lightning arrestors/surge protection with all remote antenna systems to avoid invalidating the Banner Engineering Corp. warranty. No surge protector can absorb all lightning strikes. Do not touch the SureCross device or any equipment connected to the SureCross device during a thunderstorm.

WARRANTY: Banner Engineering Corp. warrants its products to be free from defects for one year. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.

All specifications published in this document are subject to change. Banner reserves the right to modify the specifications of products, prior to their order, without notice. Banner Engineering reserves the right to update or change documentation at any time. For the most recent version of any documentation, please refer to our website: www.bannerengineering.com. © 2008 Banner Engineering Corp. All rights reserved.